

VESDA[®]

**VESDAnet[™] To
Ethernet TCP/IP
Using MOXA NPort
Server**

Application Note

July 2007

This page has been left blank intentionally.

Preface

This Application Note provides instructions on how to connect and interface VESDA devices and VESDAnet to an Ethernet TCP/IP network using a MOXA NPort Server. It also includes instructions on how to configure your PC and test the connection with VESDA System Manager (VSM4) software.

Related Products

Related products are as follows:

- All VESDA detectors
- VSM
- VESDAnet
- VSC
- VESDA HLI

This page has been left blank intentionally.

Introduction

Operation

The RS232/485 serial connectors on VESDA detectors or a VESDAnet network of detectors can be connected to one side of a Serial to Ethernet Device via a High Level Interface (“HLI”). Connecting a 10/100 Mbps Ethernet connector to the other side will provide communication between the VESDA devices over a TCP/IP network (Figure 1).

Depending on the selected configuration, any computer with IP connectivity, and running VSC or VSM, is able to establish communications with a VESDA device or VESDAnet network from virtually any location.

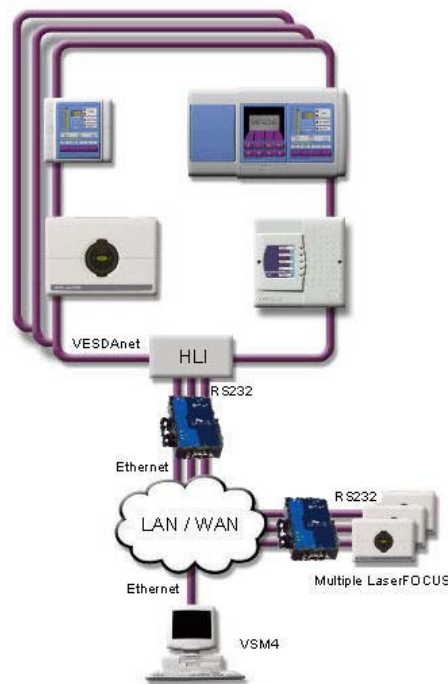


Figure 1 – Illustration of the connectivity of VESDA detectors and VESDAnet with the VSM4 software over a TCP/IP network.

Business Efficiency And Cost Savings

Ethernet and other IP networks have become an essential part of facility infrastructure. It is common to find Ethernet networks throughout modern buildings, and Internet or private wide area networking is a popular means of providing remote access to many building services.

The use of powerful VESDA system configuration and management software with reliable TCP/IP networking, provides remote maintenance tools that improve operational efficiency and reduce the costs associated with on-site visits.

The cost savings accessed by utilizing VESDAnet communications over wide area or local area TCP/IP networks can be significant.

Applications

VESDAnet to Ethernet connectivity is of use in the following applications:

- Large and campus site monitoring
- Remote site management and maintenance
- Campus integration
- Unmanned or inaccessible sites

Communications over Ethernet with Multiple Remote VESDAnet™ Networks

The illustration below provides an example of one likely configuration. You should note that other configurations are possible.

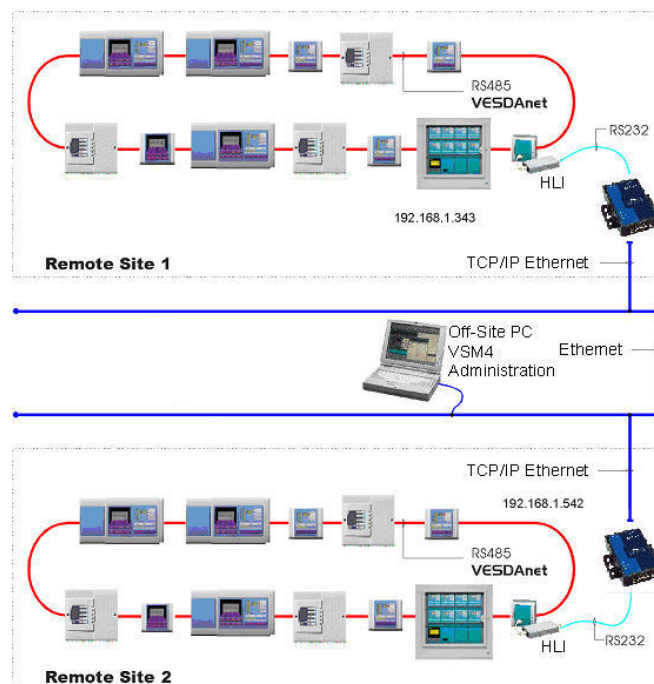


Figure 2 – Example configuration.

WARNING: Remote interfacing between VESDA detectors and other devices via Ethernet does not comply with fire approvals for primary fire reporting. This method should only be used for auxiliary monitoring, supervision and maintenance.

Interfacing VESDAnet To A Serial To Ethernet Device

Overview

The following is an overview of the procedure for interfacing VESDAnet to a Serial to Ethernet device:

1. Each remote site must be equipped with a VESDAnet socket, PC-Link HLI and one Serial to Ethernet device.
2. Each Ethernet device must be assigned an IP address.
3. Software for configuring the MOXA Serial to Ethernet device must be installed on your PC and various parameters set.

The PC can then connect to a serial port through a TCP/IP Ethernet. Windows recognizes the port on the Serial to Ethernet devices as a real COM port, even though it connects through the virtual link of the Ethernet.

You can connect a PC to a Serial to Ethernet device connected outside the PC's LAN. To do this, you require information about the public IP and Gateway addresses associated with the Ethernet device.

Note: For remote sites that connect to VESDA detectors, consult your IT Administrator for advice on the most appropriate TCP/IP connectivity between your PC and Serial to Ethernet device.

Step 1 – Purchasing A MOXA Serial To Ethernet Device

Xtralis recommend using MOXA NPort Servers, specifically the models listed in Table 1. You should purchase a MOXA NPort server and the appropriate cables. If you wish to assemble your own RJ45 cable, follow the cable pin out table below.

Obtain a copy of NPort Administrator software version 1.5.9. Contact MOXA at <http://www.moxa.com> for information about NPort servers and for a copy of the software.

Note: Xtralis provide limited application support for MOXA Serial to Ethernet devices. You should refer to MOXA's product manuals and troubleshooting guides.

Configurations described in this document are based on the functions and features of the Moxa NPort 5110 Serial to Ethernet device.

Table 1 - MOXA NPort servers recommended by Xtralis

Model	Ports	Firmware version	PC software	PC software version	Cable to connect to HLI
NPort 5110	1	1.1	NPort Administrator	1.5.9	DB9 – standard extension cable (straight through DB9 male to DB9 female)
NPort 5610 -16	16	2.1	NPort Administrator	1.5.9	RJ45 – Moxa part # CBL-RJ45M9-150
NPort 5410	4	2.2	NPort Administrator	1.5.9	DB9 – standard extension cable (straight through DB9 male to DB9 female)
NPort 5210	2	2.0	NPort Administrator	1.5.9	RJ45 – Moxa part # CBL-RJ45M9-150

Table 2 – Cable pin out table for an RJ45 cable.

DB9 Male Pin	RJ45 Pin
1	6
2	5
3	4
4	8
5	3
6	1
7	2
8	7
9	NC

Step 2 – Arranging An Open IP Connection And Fixed IP Address

Your IT department will need to provide you with access to 1 LAN port. The port allocated to you will depend on your LAN and WAN setup. Your IT department should verify that this port is open and clear and not blocked by your company's firewall.

Your IT department will also need to provide you with a static IP address. Due to known problems with the MOXA software, the static IP address MUST NOT end in .255. For example, aa.bbb.ccc.255. If the IP address ends in .255, you will experience problems with your MOXA server. Your IT department should verify that the IP address allocated to you is accessible from the PC loaded with your application software (for example, VSM4).


Step 3 – Configuring Your PC To Connect To The MOXA Serial To Ethernet Device

Install Moxa NPort Admin Suite 1.5.9


Note: You should uninstall all previous versions of NPort Administrator software and reboot your PC *before* installing version 1.5.9. This software requires at least 2.5 MB of disk space.

You can run the NPort Administrator software from WinZip as follows:


1. In WinZip, double click on the filename npadam_setup_1.5.9.exe to start the Setup Wizard.
2. Follow the prompts in the Wizard and install NPort Admin Suite 1.5.9 on your PC.
3. Set the IP Address for the Moxa NPort as follows:
 - a) Open NPort Administrator software.
 - b) Click on **Search** from the toolbar. The software will search for all Moxa devices on the network. The model number, MAC Address and IP address of each Moxa will be displayed under **Configuration**.

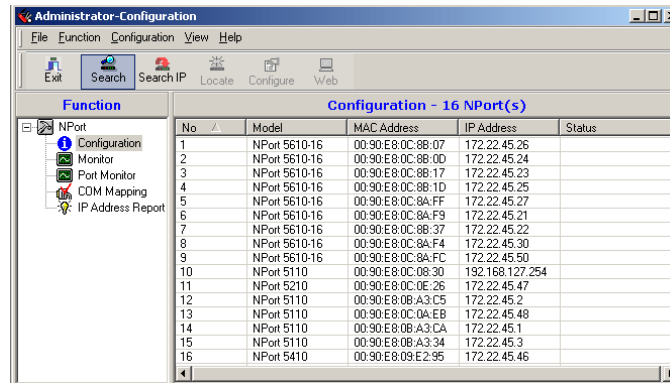


- Click on the NPort model and then from the toolbar click on **Configure**. The Configuration screen will be displayed in a separate window.

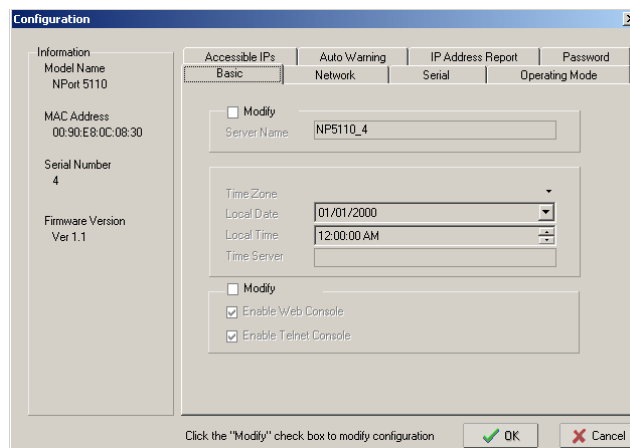

- Click on the **Network** tab and then check the **Modify** box. You must change the IP address to the address provided by your IT department. You should not use the default IP address. Enter the IP address in the text box provided and then click on the **Operating Mode** tab.

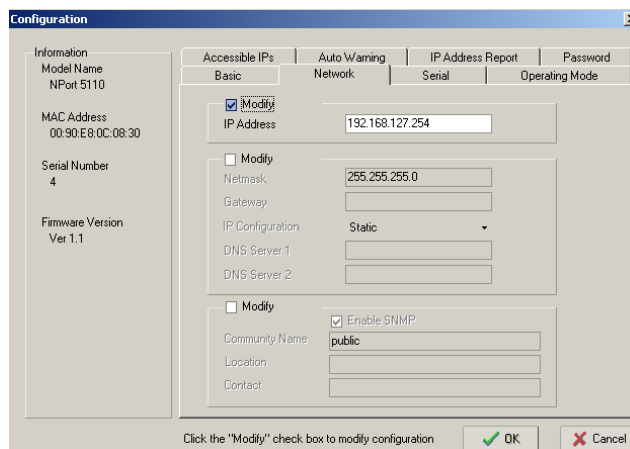

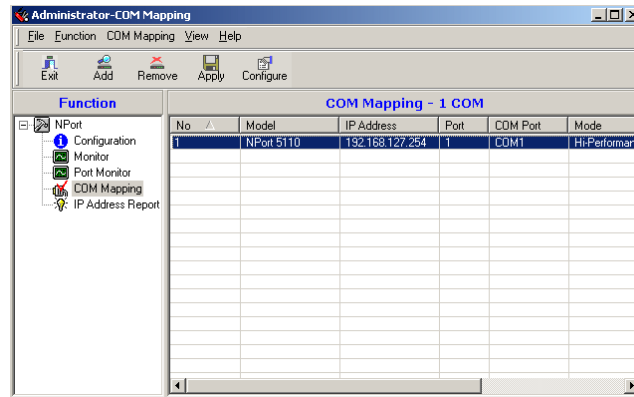


4. Click on the NPort device under **COM Mapping – 1 COM** and then from the toolbar click on **Configure**. The **COM Port Settings** configuration screen will be displayed in a separate window.
5. A COM Port is automatically selected and shown in the text box labelled **COM Number** under the **Basic Settings** tab. All COM Ports are contiguous and the software selects the first available COM Port. If you need to change the COM Number, select a COM port from the drop down menu.

Note: The COM Port automatically selected should be added to your existing list of COM Ports. You should check that the COM Port did not override your existing COM Ports.

WARNING: Do not change any of the settings in the **Advanced Settings** or **Serial Parameters** tabs. The application software (VSM4) automatically configures this information.

6. Click on **OK** to set the COM Port and return to the main screen.

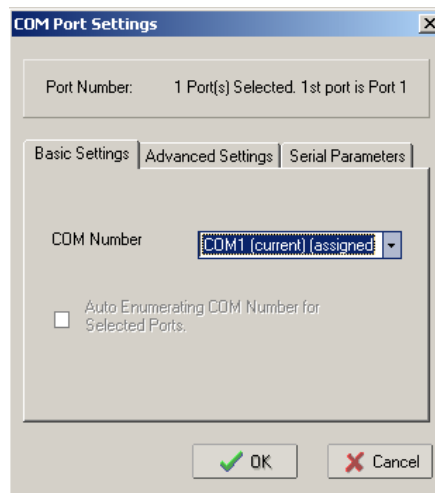

7. From the toolbar, click on **Apply** to save your configuration settings.




8. A dialogue box will confirm that you wish to apply these settings. Select **Yes**.
9. You will be prompted to change the firmware operating mode to Real COM. The firmware operating mode was set to Real COM when you set the IP Address for the NPort device. Click on **OK** to complete the COM Port Mapping.

Step 5 – Test The Connection Using VESDA System Manager (VSM4)


Purchase a copy of VSM4 from Xtralis (see www.xtralis.com) and install it on your PC. The VSM4 Product Guide contains instructions on how to install and set up VSM4 software.

Test the configuration as follows:


1. Logon to VSM4 and establish a connection.
2. From the main menu, click on **Connection** and then **Manager**. The Connection Manager screen will be displayed. Click on **Add**.

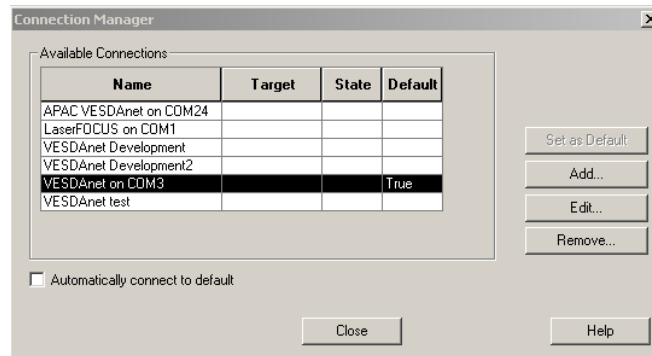


3. Check the box for the type of connection you require and then click on **Next**. In this case, connection to a VESDAnet is shown.

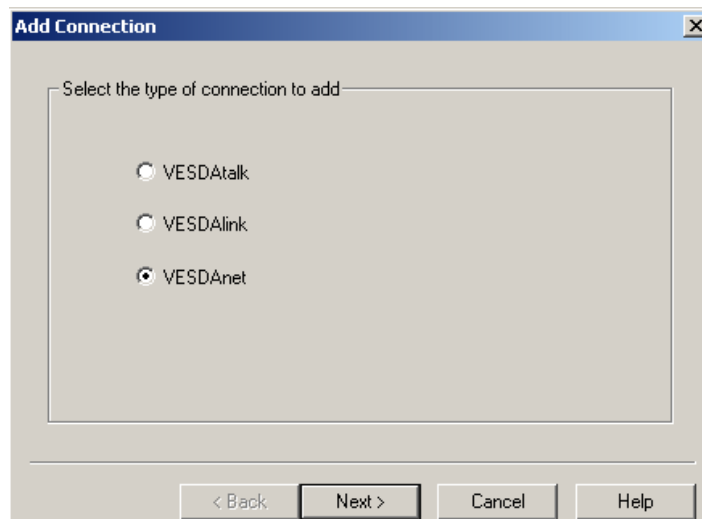


4. Select the COM Port from the drop down list. NPort Administrator software automatically assigns a COM port to the device (see section 4.2). Select the relevant COM Port and click on **Next** to continue.

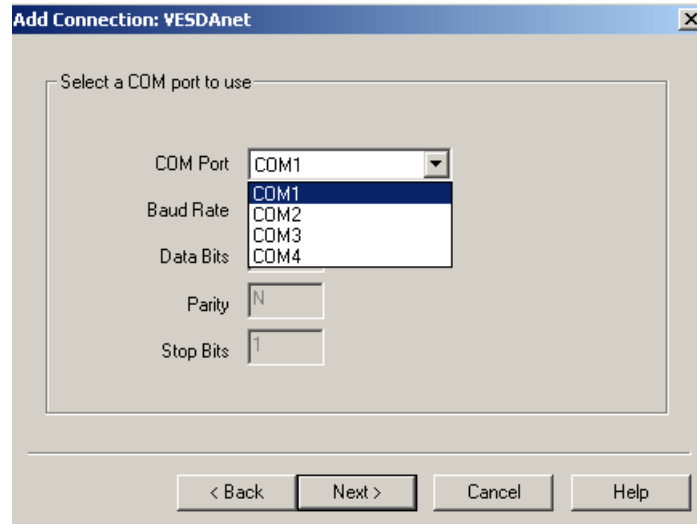


5. Click on **Finish** to return to the Connection Manager screen.

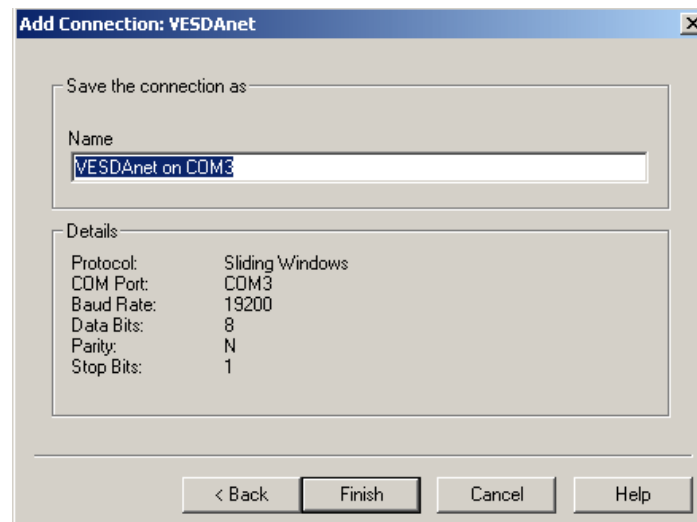


6. Click on **Close** to close the Connection Manager screen.

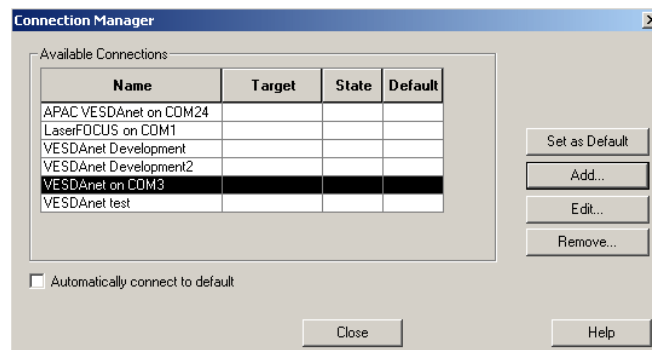


- From the main menu click on **Connection** and then **Connect and View**. The Open Connection window will be displayed.

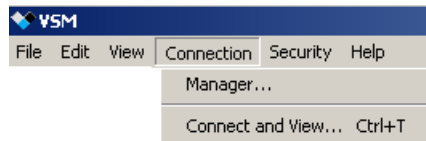

- In the Open Connection window, click on **Details**. Select the name of the COM Port from the Available Connections list and click on **OK**.

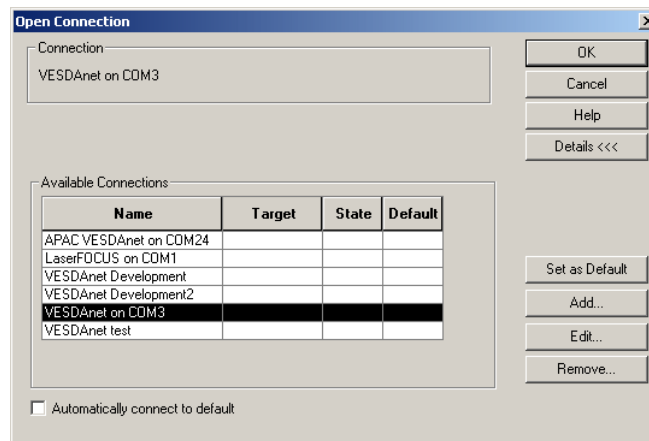

- If the MOXA NPort is correctly configured, the device or devices associated with this COM Port will be displayed under the VESDAnet tree.

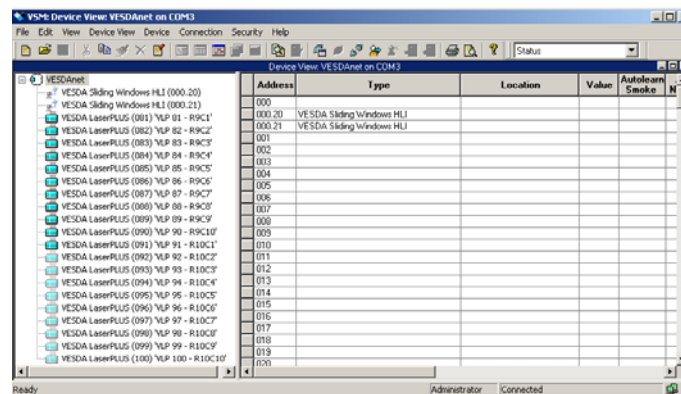

Additional Support

For further information please contact an Xtralis office or e-mail Technical Support at www.xtralis.com/vesda.

Disclaimer on the Provision of General System Design Recommendations

Any recommendation on system design provided by Xtralis is an indication only of what is considered to be the most suitable solution to meet the needs of the common application environments described.

In some cases the recommendations on system design provided may not suit the unique set of conditions experienced in a particular application environment. Xtralis has made no inquiry nor undertaken any due diligence that any of the recommendations supplied will meet any particular application. Xtralis makes no warranty as to the suitability or performance of any recommendation on system design. Xtralis has not assessed the recommendation on system design for compliance with any codes or standards that may apply nor have any tests been conducted to assess the appropriateness of any recommendations on system design. Any person or organization accessing or using a recommendation on system design should, at its own cost and expense, procure that the recommendation on system design complies in all respects with the provision of all legislation, acts of government, regulations, rules and by-laws for the time being in force and all orders or directions which may be made or given by any statutory or any other competent authority in respect of or affecting the recommendation on system design in any jurisdiction in which it may be implemented.

Xtralis products must only be installed, configured and used strictly in accordance with the General Terms and Conditions, User Manual and product documents available from Xtralis. Xtralis accepts no liability for the performance of the recommendation on system design or for any products utilized in the implementation of the recommendation on system design, aside from the General Terms and Conditions, User Manual and product documents.

No statement of fact, drawing or representation made by Xtralis either in this document or orally in relation to this recommendation on system design is to be construed as a representation, undertaking or warranty.

To the extent permitted by law, Xtralis excludes liability for all indirect and consequential damages however arising. For the purposes of this clause, 'consequential damage' shall include, but not be limited to, loss of profit or goodwill or similar financial loss or any payment made or due to any third party.

Recommendations on system design are provided exclusively to assist in design of systems using Xtralis products. No portion of this recommendation on system design can be reproduced without the prior approval in writing of Xtralis. Copyright and any associated intellectual property in any such recommendations on system design or documentation remains the property of Xtralis.

www.xtralis.com

The Americas +1 781 740 2223

Asia +852 2297 2438

Australia and New Zealand +61 3 9936 7000

Continental Europe +41 55 285 99 99

UK and the Middle East +44 1442 242 330

The contents of this document are provided on an "as is" basis. No representation or warranty (either express or implied) is made as to the completeness, accuracy or reliability of the contents of this document. The manufacturer reserves the right to change designs or specifications without obligation and without further notice. Except as otherwise provided, all warranties, express or implied, including without limitation any implied warranties of merchantability and fitness for a particular purpose are expressly excluded.

This document includes registered and unregistered trademarks. All trademarks displayed are the trademarks of their respective owners. Your use of this document does not constitute or create a licence or any other right to use the name and/or trademark and/or label.

This document is subject to copyright owned by Xtralis AG ("Xtralis"). You agree not to copy, communicate to the public, adapt, distribute, transfer, sell, modify or publish any contents of this document without the express prior written consent of Xtralis.

Doc. 12474_03